

X-10 **VERSAVENT**[®]

Applied to the Ridge Cap at the Jobsite



Ground Applied:

- One person installation.
- No fall protection required.
- X-10 VersaVent[®] will not blow away while installing on ridge cap.
- No jobsite waste.
- No additional roof measurements, chalk lines, sealants or clips required.



Product Advantages:

- Maximizes net-free area
- **Durable:** Tear and flame resistant
- Won't scratch roof panel
- Prevents insect, animal and snow infiltration
- Meets all building codes
- 99% recovery after compression

Engineering Test Reports

Provides Lowest In-Place Cost:


- Highly engineered design allows 2 sku's to conform to most roof panel profiles
- Application to ridge cap allows:
 - Easy, one-person installation
 - No fall protection required
 - Will not blow off while installing the ridge cap
- Boxes contain 10 each 10' sections, and product can be ordered per job, matching ridge cap length
- No roof measurements, caulking, sealants or clips required
- Clean, dust free installation
- One strip of continuous glue keeps material in place during installation
- Screws go through ridge cap and VersaVent[®]

Call Atlas for technical details on this revolutionary closure or for technical details on how to improve your building.

Vented Ridge Product Typical Properties

Property	Test Description	Results
Panel Fit		2 Sizes Fit Most Panels
Net Free Area	1" Nominal Thick	8.5 Sq.In. Per LF-Slope 17 Sq.In. Per LF-Ridge
Air Permeability	ASTM D737	760 Cu.Ft. per Min.
Heat Resistance	180° for 500 Hrs.	No Change
Humidity Resistance	ASTM D2247-97	No Change
Cold Crack	F87260 Sec. 4-C14	-55° C (-130° F)
Cold Resistance	10° for 500 Hrs.	No Change
Snow Infiltration	CRL 5704	0
Tear Strength	ASTM D3574	3.5 PPI
Tensile Strength	ASTM D3574	16 PSI - Elong. 175%
Compressive Strength	ASTM D3574	1.8 PSI@75%
Abrasion	ASTM D1175	No Damage
Water Immersion	500 Hrs.	No Change
QUW Weatherometer	ASTM G154	No Change
Attic Ventilation	UBC Code	Meets Code


Installation easy as 1, 2, 3!

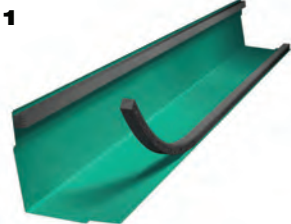

1
On the ground, apply VersaVent[®] with adhesive strip to the underside of the ridge cap, 1/4 inch in from each edge. VersaVent[®] can be cut to length with utility knife or scissors.



2
With the VersaVent[®] held in place by the adhesive, apply the ridge cap per manufacturers instructions.

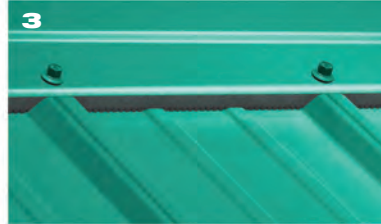

3
When installing be sure the Atlas Fasteners are positioned at the edge of the ridge cap so the fasteners pass through the VersaVent[®] material. When necessary cut the VersaVent[®] material back to over lap two pieces of ridge cap.



Fasteners For Construction
www.atlasfasteners.com

1628 Troy Road
Ashland, Ohio 44805
Phone: 419-289-6171
Fax: 419-289-2564

800-321-6977

SALES AND SERVICE CENTERS:
Ashland, OH: 1-800-321-6977
Flat Rock, NC: 1-800-364-0370
Houston, TX: 1-800-503-2105
Salem, OR: 1-800-547-8740